


DK1010

Diagram 1

Parts:

- 5 5' Galvanized Pipe
- 1 4'6" Galvanized Pipe w/ swaged end
- 2 3 Way Low Pitch Corners
- 1 Bundle of Elastic Ball Straps
- 4 1 3/8" Single Sided Clamps
- 1 UV rated tarp

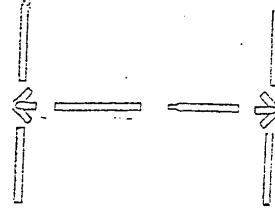

Instructions:

1. Place 3 ways and pipe on the ground as shown in diagram 1. There is a swaged pipe that is used with the center pipe to form the length.
2. Start by connecting the center 5' pipe to the 4'6" swedge pipe; then assemble each side. See diagram 2.
3. Place the tarp over the frame. Tie the elastic ball straps as shown in diagram 3. When tying elastic ball straps, alternate from one side to the other for easier installation. Two sides of the tarp will not have ball straps.
4. Place framework over the kennel. Attach the frame to the kennel by using the single sided clamps.
5. Once the framework is attached, use the remaining ball straps to attach the cover to the frame of the kennel.

Powell & Powell Supply Co. Inc.
402 McKinney Parkway
Lillington, NC 27546
(800) 800-6296
(910) 893-9892 Fax

Diagram 2

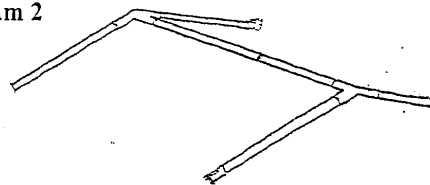


Diagram 3

