


12 x 20 King Canopy

Parts:

- 25 6'6" Galvanized Pipe
- 6 3 Way Corners
- 6 4 Way Corners
- 1 Bundle Bungees
- 1 UV Rated Tarp

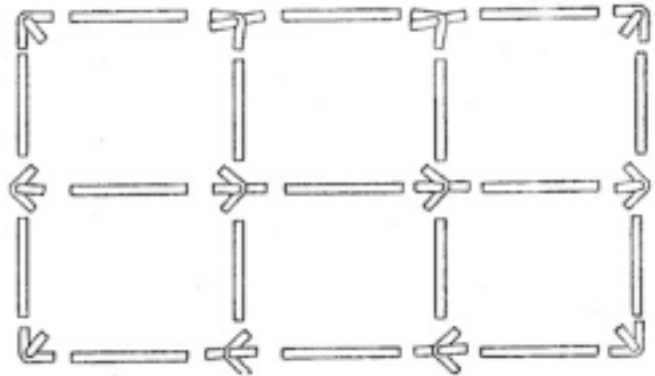

Instructions:

1. Place all corners and pipe on the ground as shown.
2. Start from the center and complete the center frame. Then assemble each side.
3. Place tarp over frame. Tie bungees as shown in diagram. When tying bungees, alternate from one side to the other for easier installation.
4. Lift one side of canopy top and insert legs. Proceed to other side and insert legs.

Note: For more permanent installation anchor framework to ground using tie downs or proper anchor kit for your needs.

Powell & Powell Supply Co., Inc.
1206 Broad Street
Fuquay-Varina, NC 27526
(919) 552-9708
Fax (919) 552-8884
Toll Free 1-800-800-6296

